

# Precautions for diving (Please make sure to observe the following.)

## HOW TO USE

- ▶ Handling cautions
- ▶ Precautions for diving (Please make sure to observe the following.)
  - ▶ Before diving
  - ▶ While diving
  - ▶ After diving
  - ▶ Structure of the case
- ▶ Mechanical watch characteristics (Hand-wound, auto-wound)
- ▶ Names of the parts and their functions
- ▶ Screw down crown
- ▶ How to wind the mainspring
- ▶ How to set the time and date
  - ▶ Date adjustment at the end of the month
- ▶ How to use the rotating bezel

 
## TO PRESERVE THE QUALITY OF YOUR WATCH

### Before diving

Before diving, check the following:

※ Names of the parts and their functions

- 1 The time is correctly set.
- 2 Turn the crown to wind up the watch so that it does not stop in the water.
  - ※ Screw down crown
  - ※ How to wind the mainspring
- 3 The rotating bezel turns smoothly. (The bezel rotation must not be too loose or too tight.)
  - ※ How to use the rotating bezel
- 4 The crown is completely screwed in.
  - ※ Screw down crown
- 5 There are no visible cracks or scratches on the crystal or watch band.
- 6 The band is firmly attached to the watch (with spring bars, clamp or other parts.)

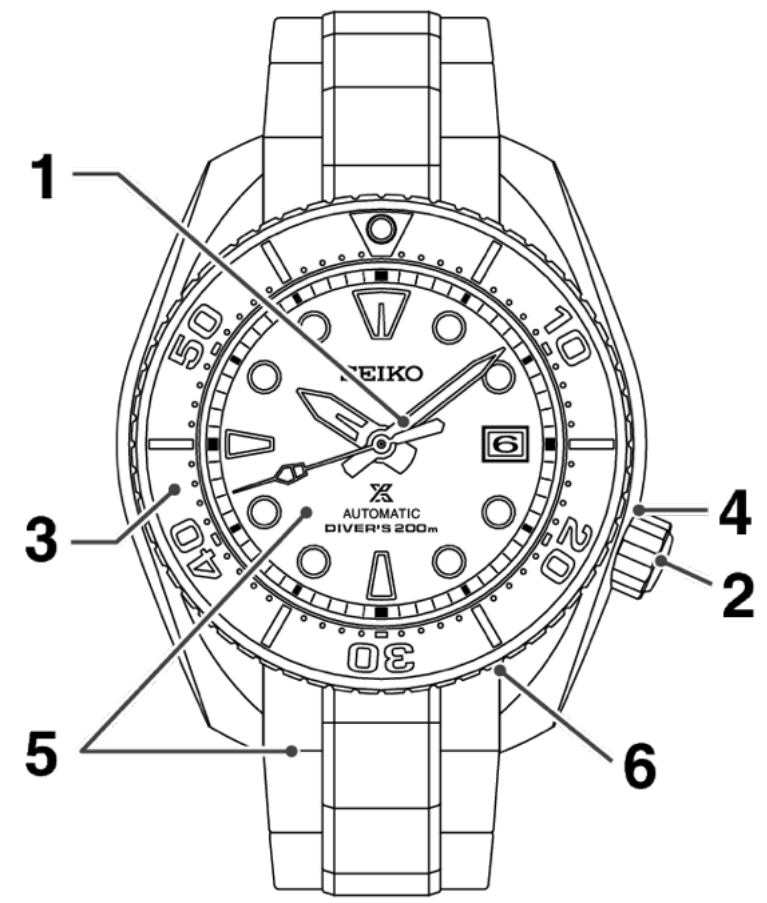


### CAUTION


If there are any malfunctions, contact the retailer from whom the watch was purchased or SEIKO CUSTOMER SERVICE CENTER.

### While diving

 Please observe the following cautions for use.

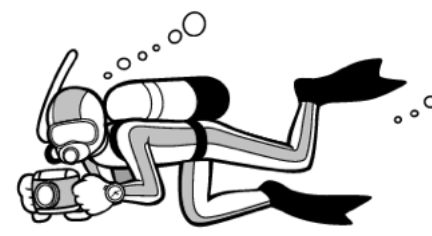

 
The watch can be used for air diving within the water resistant range displayed on the dial.

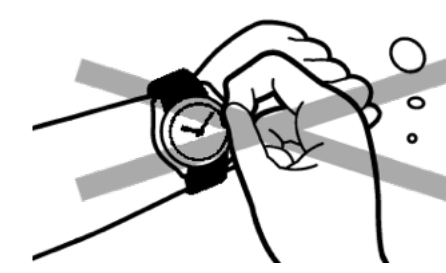

Do not operate the crown or buttons underwater.



 
Take care not to bump the watch against hard objects such as rocks.

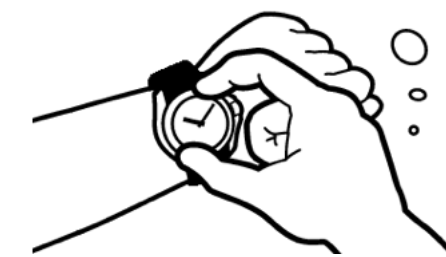

Bezel rotation may become slightly harder in the water but this is not a malfunction.

### After diving

 Please follow the care instructions below after diving.

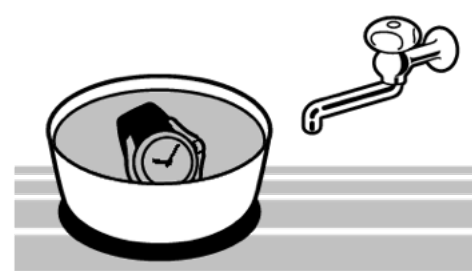

Rinse the watch in fresh water to wash out all seawater and wipe it thoroughly dry to prevent rust. Avoid pouring running water onto the watch directly from a faucet. Put some water into a bowl first, and then soak the watch in the water to wash it.



### CAUTION

  Depending on the environment where a diver's watch is used, its inner parts or movement as well as its case or band may be affected. We recommend that you have your watch overhauled regularly once every 2 or 3 years.

### Structure of the case

In the following types of models, take care of the following issues in usage.

The bezel or protective outer case is securely fastened to the watch with setscrews. **Never loosen the setscrews.**

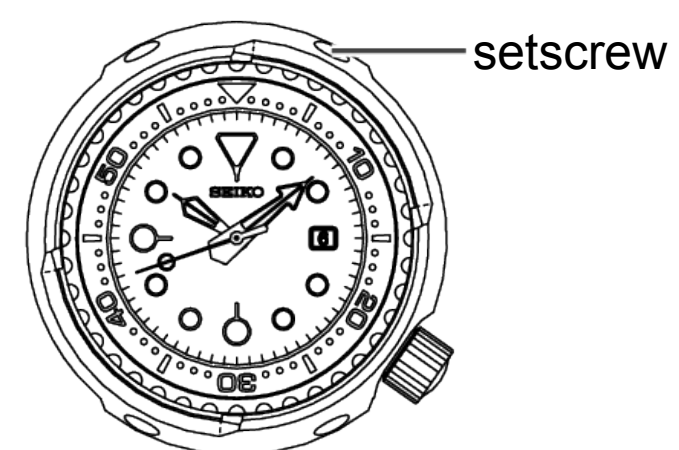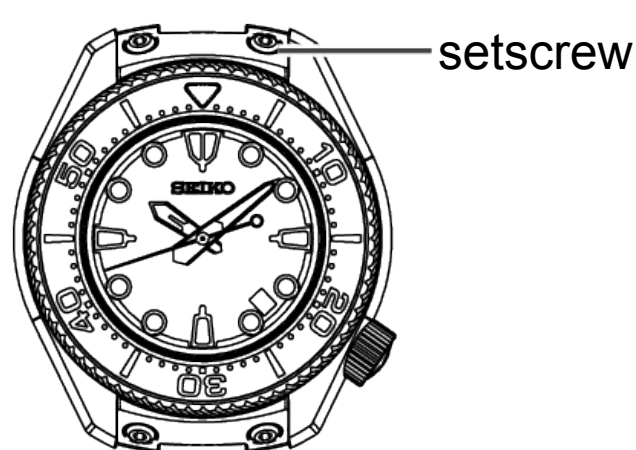

※ The above illustration is provided as an example, therefore it may not be exactly the same as your watch.

### CAUTION

Never loosen the setscrews used to fix the bezel or protective outer case. Doing so may cause damage or result in further loosening.

※ If you find that the setscrews have become loose or are functioning abnormally, consult the retailer from whom the watch was purchased or SEIKO CUSTOMER SERVICE CENTER.